


# MX30 LED Display Controller

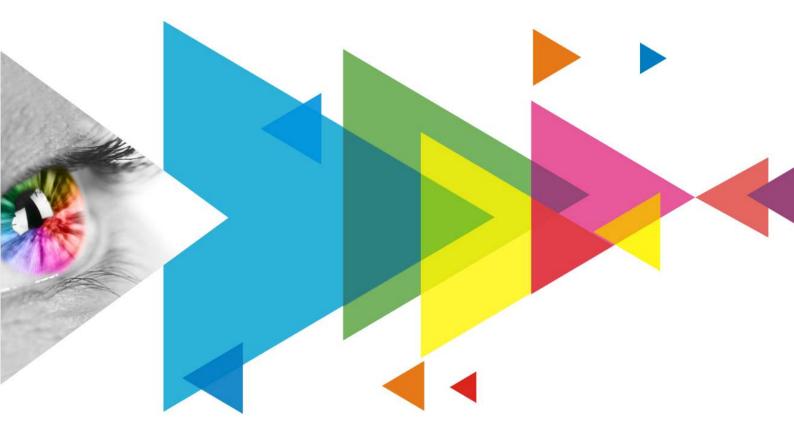

# **User Manual**

Document Version	Release Date	Description	
V1.4.2	2024-10-31	Deleted the Sync Lock related operations from the device's LCD interface.	
V1.4.1	2024-08-13	Updated the descriptions for internal source operations.	
V1.4.0	2024-04-26	The "Layer Setting" in the LCD interface of the device has been renamed to "Layer Parameters". Now, it only shows the parameters without allowing any modifications.	
V1.0.1	2023-07-04	<ul><li>Added descriptions for low latency.</li><li>Updated the application diagrams.</li></ul>	
V1.0.0	2023-02-09	First release	

# Change History

# Contents

Change History	i
Contents	ii
1 Overview	1
2 Appearance	2
2.1 Front Panel	2
2.2 Rear Panel	
3 Applications	6
4 UI Introduction	7
4.1 Home Screen	7
4.2 Main Menu	
5 Initial Screen Configuration	
5.1 Quick Configuration via Front Panel Screen	
5.1.1 Set Input Source	
5.1.2 Load Cabinet Config File	
5.1.3 Swift Layout	
5.2 Free Screen Configuration via VMP	12
6 Display Effect Adjustment	
6.1 Apply Presets	
6.2 Set External Input Source Parameters	
6.2.1 View Input Source Information	
6.2.2 Set Resolution and Frame Rate (HDMI1, HDMI2 and DP only)	
6.2.3 Adjust Color	
6.2.4 Set HDR Parameters (HDMI1 only)	
6.3 Set Internal Input Sources	15
6.4 View Layer Parameters (All-In-One Controller Mode only)	
6.5 Set Output Parameters	17
6.5.1 Adjust Screen Brightness	
6.5.2 Adjust Gamma and Color Temperature	
6.5.3 Set Low Latency	
6.5.4 Set Bit Depth	
7 Device Management	
7.1 Switch Working Mode	
7.2 Configure Communication Settings	
	21
7.4 Control Display Status	
7.5 Diagnostics	
7.5.1 Upon Powering Up	
7.5.2 Maintenance	
7.6 View the Firmware Version	
7.7 Reset to Factory Settings	
8 Basic System Settings	
8.1 Set Language	
8.2 Set Session Timeout	
8.3 Set Temperature Scale	
8.4 View Service Information	
9 Product Specifications	
10 Video Source Specifications	27
11 Ethernet Port Load Capacity	29

# **1** Overview

The MX30 is an all-in-one LED display controller in the brand-new control system COEX series of Xi'an NovaStar Tech Co., Ltd. (hereinafter referred to as NovaStar). This controller integrates video processing and video control into one box and offers rich video input connectors (HDMI 2.0, HDMI 1.4, DP 1.1 and 3G-SDI), 10x Ethernet output ports and 2x 10G optical ports. It can also work with the brand-new software VMP (Vision Management Platform) to provide a better operation and control experience.

This document mainly describes the menu operations on the LCD screen of the controller. For more function operations, see the VMP Vision Management Platform User Manual.

# **2** Appearance

# 2.1 Front Panel

Running Indicator	Standby Button				
USB 2.0	TFT Screen Knob BACK				
Name	Description				
Running Indicator	Solid red: Standby Solid blue: The device is being started. Solid green: The device is running normally. Flashing red: The device is running abnormally.				
Standby Button	Press the button to power on or power off the device. Hold down the button for 5s or longer to restart the device.				
USB 2.0	Connect to a USB drive only to export the device diagnostic result. Only the NTFS and FAT32 file systems are supported. Others are not supported.				
TFT Screen	A 3.5-inch screen to display the device status, menus, submenus and messages for parameter settings				
Knob	On the home screen, press the knob to enter the main menu screen.				
	On the main menu screen, rotate the knob to select a menu item or adjust the parameter value. Press the knob to confirm the operation.				
	Hold down the knob and <b>BACK</b> button simultaneously for 5s or longer to lock or unlock the buttons.				
BACK	Go back to the previous menu or cancel the current operation.				

# 2.2 Rear Panel



Inputs						
Туре	Qty	Description				
HDMI 2.0-1 IN 1 I		Resolutions	Max resolution: 4096×2160@60Hz (Forced) Min resolution: 800×600@60Hz			
		Max width/height (Forced)	Max width: 8192 pixels (8192×1080@60Hz) Max height: 7680 pixels (1080×7680@60Hz)			
		Frame rates	23.98 / 24 / 25 / 29.97 / 30 / 47.95 / 48 / 50 / 59.94 / 60 / 72 / 75 / 85 / 100 / 119.88 / 120 / 143.86 / 144 / 240 Hz			
		HDR	Support HDR10 and comply with the SMPTE ST 2084 and SMPTE ST 2086 standards. Support HLG.			
		EDID management	Support standard resolutions, up to 3840×2160@60Hz. Support custom input resolutions.			
		HDCP	HDCP 2.2 compliant, backwards compatible with HDCP 1.4/HDCP 1.3.			
		Interlaced signal inputs	Not supported			
HDMI 1.4-2 IN	1	Resolutions	Max resolution: 4096×1080@60Hz (Forced) Min resolution: 800×600@60Hz			
		Max width/height (Forced)	Max width: 4096 pixels (4096×1080@60Hz) Max height: 4096 pixels (1080×4096@60Hz)			
		Frame rates	23.98 / 24 / 25 / 29.97 / 30 / 47.95 / 48 / 50 / 59.94 / 60 / 72 / 75 / 85 / 100 / 119.88 / 120 / 143.86 / 144 / 240 Hz			
		EDID management	Support standard resolutions, up to 3840×1080@60Hz. Support custom input resolutions.			
		HDCP	HDCP 2.2 compliant, backwards compatible with HDCP 1.4/HDCP 1.3.			
		Interlaced signal inputs	Not supported			
DP 1.1	1	Resolutions	Max resolution: 4096×1080@60Hz (Forced) Min resolution: 800×600@60Hz			
		Max width/height (Forced)	Max width: 4096 pixels (4096×1080@60Hz) Max height: 4096 pixels (1080×4096@60Hz)			
		Frame rates	23.98 / 24 / 25 / 29.97 / 30 / 47.95 / 48 / 50 / 59.94 / 60 / 72 / 75 / 85 / 100 / 119.88 / 120 / 143.86 / 144 / 240 Hz			
		EDID management	Support standard resolutions, up to 3840×1080@60Hz. Support custom input resolutions.			
		HDCP	HDCP 2.2 compliant, backwards compatible with HDCP 1.4/HDCP 1.3.			



		Interlaced signal inputs	Not supported				
3G-SDI IN	2	Standards	Support ST-424 (3G), ST-292 (HD) and ST-259 (SD) standard video inputs.				
			Support 3G-Level A/Level B (DS mode).				
		Resolutions	Max resolution: 1920×1080@60Hz				
		Frame rates	23.98/24/25/29.97/30/47.95/48/50/59.94/60 Hz				
		Interlaced signal inputs	Support MQ level deinterlacing. The interlaced signals will be automatically detected and converted to progressive signals.				
Outputs							
Туре	Qty	Description					
1–10	10	Gigabit Ethernet ou	utput ports. Support hot backup between Ethernet ports.				
		Max device load ca	apacity: 6.5 million pixels				
		The maximum load Ethernet Port Load	capacity per Ethernet port is as follows. For details, see 11				
		8bit@60Hz: 659,72	22 pixels				
		card, the capacity of	10bit@60Hz: 329,861 pixels. When the controller works with the A10s Pro receiving card, the capacity can be up to 494,791 pixels.				
		Note					
		192 pixels or more.	The maximum load capacity is only achieved when the load width of a single port is 192 pixels or more. If the load width is less than that, the load capacity will be reduced accordingly, calculated as (192 - load width) × load height.				
OPT 1–2	2	10G optical output ports					
		OPT 1 transmits th	e data of Ethernet ports 1 to 10.				
		OPT 2 is the copy	OPT 2 is the copy channel of OPT 1.				
HDMI 2.0-1 LOOP	1	HDMI loop through	. Up to 8 devices can be cabled in one loop.				
HDMI 1.4-2 LOOP	1						
3G-SDI LOOP	2	SDI loop through. I	Jp to 8 devices can be cabled in one loop.				
SPDIF OUT	1	A digital audio output (Reserved)					
Controls							
Туре	Qty	Description					
ETHERNET	2	Gigabit Ethernet control ports. Support TCP/IP protocol and star topology.					
		They have the same functions without priority and order, and can be connected to VMP software. No switch or router is needed to deploy multiple devices on the same LAN via device cascading as the network switching function is already built in. Up to 20 MX30 devices can be cascaded.					

GENLOCK	1	A pair of Genlock signal connectors. Support Bi-Level, Tri-Level, and Blackburst.	
		IN: Accept the sync signal.	
		LOOP: Loop the sync signal.	
		The Genlock input signal supports a frame rate range from 23.98 Hz to 60 Hz. For standard Genlock signal generators, up to 20 MX30 devices can be cascaded.	
AUX	1	An auxiliary port that connects to the central control device (RS232) (Reserved)	
Power			
100-240V~, 50/60Hz, 2-0.8A	1	An AC power input connector and switch	


# Note

The maximum input resolution and maximum width and height of HDMI and DP connectors must be obtained by setting the graphics card.


# **3** Applications

The MX30 has two typical application scenarios as shown below. In those application examples, the LED screen size is 4096×2160.

### **Application 1: Output via Ethernet Ports**

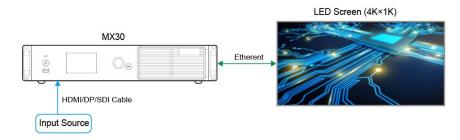

## Application 2: Long-Distance Transmission via OPT Ports

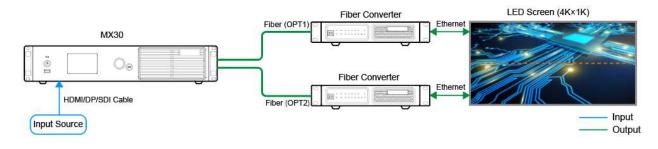

# **4** UI Introduction

# 4.1 Home Screen

After the device is powered on, the home screen showing device related information is displayed as follows.

#### Figure 4-1 Home screen

↑ MX30 All-In-One Controller 🔒 👬 👬 192.168.255.160						
Input		Port				
HDMI 1	HDMI 2	DP				
SDI 1	SDI 2	Internal	1 2 3 4 5 6 7 8 9 10			
Internal [] 1920x1080 (		<mark>Genlock</mark> 144Hz				
Screen 1920x1080@144Hz						
Sync: HDMI 1@143.86Hz SDR 💥 🌡 36°C						

The home screen shown in Figure 4-1 is described in Table 4-1.

Table 4-1	Home scre	en descriptions
-----------	-----------	-----------------

Area	Content	Description
Top line	MX30	The device name
		The name can be changed in VMP software.
	All-In-Once Controller	The device working mode
		All-In-One Controller: The video processing and sending functions are available.
		Send-Only Controller: Only the video sending function is available.
		For related operations, please refer to 7.1 Switch Working Mode.
	<b>Ģ</b>	The device button lock status
		When the icon displayed: The buttons are locked.
		When the icon not displayed: The buttons are unlocked.
		Hold down the knob and <b>BACK</b> button simultaneously for 5s or longer to lock or unlock the buttons.
	ф.	The connection status of the Ethernet ports
	•••	Blue: Connected
		Gray: Disconnected
	192.168.255.160	The device IP address
		For related operations, please refer to 7.2 Configure Communication Settings.



Area	Content	Description		
Input	HDMI1, HDMI2, DP, SDI1, SDI2, Internal	The device input source type and status Green: The signal is accessed normally and used. Blue: The signal is accessed normally, but not used. Red: The signal is abnormal. Gray: The signal is abnormal and not used. For related operations in the Send-Only Controller working mode, please		
	Internal 1920×1080@144Hz	refer to 5.1.1 Set Input Source. The resolution and frame rate of the currently available input source If multiple input sources are available, the resolution and frame rate of each input source will be displayed one by one. If the input is used by the layer, the layer number will be displayed below. For related operations, please refer to 6.2.2 Set Resolution and Frame Rate (HDMI1, HDMI2 and DP only).		
Screen	1920×1080@144.00Hz	The screen resolution and frame rate		
	*	The screen brightness For related operations, please refer to 6.5.1 Adjust Screen Brightness.		
Port	1–10	The statuses of the Ethernet ports Blue: Connected Gray: Disconnected		
OPT	1–2	The statuses of the OPT ports Blue: Connected Gray: Disconnected		
Bottom line	Sync:HDMI@143.86Hz	The sync signal currently used and the signal status Sync: Active Input: Sync with the frame rate of the current input source Sync: Genlock: Sync with the frame rate of the Genlock signal Sync: Internal: Sync with the frame rate of the internal clock of the device Color code: Blue: The signal is normal. Red: The signal is abnormal.		
	SDR	The format of the dynamic range For-related operations, please refer to 6.2.4 Set HDR Parameters (HDMI1 only).		
	*	The output display status. For related operations, please refer to 7.4 Control Display Status. The display is frozen. C: The display is blacked out When no icon is displayed, the display is normal		
	8	The temperature inside the chassis		

# 4.2 Main Menu

On the home screen, press the knob to enter the main menu screen. When the device working mode is All-In-One Controller, the main menu is shown in Figure 4-2. When the device working mode is Send-Only Controller, the **Layer Parameters** menu is not displayed.

#### Figure 4-2 Main menu

Main Menu	
Screen Brightness(%)	97 🚄
Layer Parameters	>
Input Settings	>
Screen Configuration	>
Display Control	>
Preset	>
Advanced Functions	>
System Settings	>
Communication Settings	>
语言/Language	>

# **5** Initial Screen Configuration

If the LED screen, cabinets, data flow and the number of cabinets loaded by Ethernet ports can meet the following requirements, you can configure the screen via the device front panel menu; otherwise, screen configuration in VMP will be your ideal choice.

- Screen: The LED screen must be a regular screen.
- Cabinet: The cabinets must be regular ones of the same size, and function well.
- Data flow: The data must run in the same way for all Ethernet ports and the data flow must be one of the followings. The starting position of the data flow is the first cabinet of Ethernet port 1, and the connections are made in sequence according to the serial number of the Ethernet port.



• Number of cabinets loaded by Ethernet ports: If *n* ports are used to load the cabinets, the number of cabinets loaded by each of the first (*n*-1) ports must be the same and the integral multiple of the number of cabinet rows or columns, and it must be greater than or equal to the number of cabinets loaded by the last port.

# 5.1 Quick Configuration via Front Panel Screen

#### 5.1.1 Set Input Source


Select the desired input source and complete the related settings, such as resolution and frame rate. If the resolutions of the input source and screen are the same, the image can be displayed pixel to pixel. A lower frame rate may result in image flickering, while a higher frame rate helps stabilize the display image.

# Note

Input source settings are required for screen configuration in the Send-Only Controller working mode and not required in the All-In-One Controller mode.

Step 1 On the main menu screen, choose Input Settings > Select Input to select a video source.

#### Figure 5-1 Select input source

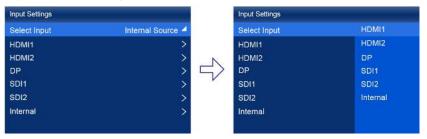

- Step 2 Perform the corresponding operations for the input source according to the input source type. For the SDI sources, please skip this step.
  - External input sources (HDMI1, HDMI2, DP)

l	nput Settings		HDMI1		EDID	
s	Select Input HDMI1	4	EDID >		Mode	Custom 🚽
ŀ	HDMI1	•	Color Adjustment >		Resolution	3840*2160
ŀ	HDMI2		Infoframe >		Frame Rate(Hz)	60.00 🔺
C	)P	15	Infoframe Override	$\left  \nabla \right\rangle$	Apply	
5	SDI1		HDR Auto>	, i		
s	SDI2	•				
- I	nternal	>				

PAGE

10

- a. Choose input source > EDID. The input source is HDMI1, HDMI2, or DP.
- b. Set Mode to Custom or Standard, and then set the resolution and frame rate.

Custom: Set the resolution manually.

Standard: Select the desired resolution from the drop-down options.

- c. After the settings are done, click Apply.
- Internal sources



- a. Choose Internal > Image, and navigate to the sub-menu. Then, select a picture.
- b. When the relevant parameters of the image are displayed, set the parameters according to your actual needs; otherwise, please skip this step.
- c. Press the **BACK** button to go back to the upper-level menu and select **Resolution**.
- d. Set Mode to Custom or Standard, and then set the resolution and frame rate.
- e. After the settings are done, click Apply.

#### 5.1.2 Load Cabinet Config File

When the cabinet cannot display images normally, send the cabinet configuration file (.rcfgx) to the cabinet and save it to let the cabinet display image normally. Before the operation, please import cabinet configuration file with VMP, or store the cabinet configuration file in the root directory of the USB drive and insert the USB drive into the USB port on the device front panel.

Step 1 On the main menu screen, choose Screen Configuration > Send Cabinet Config File.

#### Figure 5-2 Send cabinet config file



- Step 2 Select the target configuration file.
- Step 3 Select Yes in the displayed dialog box.

After the configuration file is successfully sent, a message appears on the menu screen and then then you will automatically return to configuration file screen.

- Step 4 Press the **BACK** button to go back to the upper-level menu.
- Step 5 Select Save to RV Card.
- Step 6 Select Yes in the displayed dialog box.

After the configuration file is successfully saved, a message appears on the menu screen.

#### 5.1.3 Swift Layout

Set the screen configuration parameters to quickly complete the cabinet connection, so that the LED screen can display the input source image normally.



Step 1 On the main menu screen, choose Screen Configuration > Swift Layout.

#### Figure 5-3 Quick configuration

Screen Configuration			Screen Configuration		Quick Configuration	
Mapping					Cabinet Row Qty	0 🗹
Quick Configuration	>				Cabinet Column Qty	0 🚄
Send Cabinet Config File	>	N	Warning: All cabinets topology and Ethernet port	N	Port 1 Cabinet Qty	0 4
Save to RV Card		$\leq$	backup will be removed. Continue?		Data Flow (Front View)	
		r		ľ	H Offset	0 🗹
					V Offset	o 🚄
			No Yes			

Step 2 Select Yes in the displayed dialog box.

Step 3 Set screen configuration parameters as required.

- Cabinet Row Qty: Set the quantity of cabinet rows.
- Cabinet Column Qty: Set the quantity of cabinet columns.
- Port 1 Cabinet Qty: Set the quantity of the cabinets loaded by Ethernet port 1.
- Data Flow (Front View): Select the data flow for the cabinets loaded by Ethernet port 1.
- H Offset: Set the horizontal offset of the displayed image.
- V Offset: Set the vertical offset of the displayed image.

### 5.2 Free Screen Configuration via VMP

The VMP software can be used to configure either the regular screens or complex screens, and supports free wiring of the cabinets, plus the ability of calculating the used load capacity according to the cabinets that are actually loaded. For the details of performing the free screen configuration, please refer to *VMP Vision Management Platform User Manual*.

# 6 Display Effect Adjustment

# 6.1 Apply Presets

Apply a saved preset in VMP to the device to quickly complete display effect adjustment.

Step 1 On the main menu screen, select Preset.

The saved presets in VMP is displayed on the menu screen, as shown in Figure 6-1.

Figure 6-1 Presets	
Preset	
1. Preset 1	1
2. Preset 2	

Step 2 Select a preset.

## 6.2 Set External Input Source Parameters

#### 6.2.1 View Input Source Information

View the attribute values of the external input source, including the resolution, frame rate, bit depth, color gamut, etc.

Step 1 On the main menu screen, choose **Input Settings** > *input source* > **Infoframe**. The *input source* is HDMI1, HDMI2, DP, SDI1, or SDI2.

Figure 6-2 Input source information



When the device working mode is All-In-One Controller, the Select Input menu is not displayed.

Step 2 View the input source information.

#### 6.2.2 Set Resolution and Frame Rate (HDMI1, HDMI2 and DP only)

Set the resolution and frame rate of the external input source. If the resolutions of the input source and screen are the same, the image can be displayed pixel to pixel. A lower frame rate may result in image flickering, while a higher frame rate helps stabilize the display image.

Step 1 On the main menu screen, choose Input Settings > input source > EDID. The input source is HDMI1, HDMI2, or DP.



#### Figure 6-3 EDID



When the device working mode is All-In-One Controller, the Select Input menu is not displayed.

Step 2 Set Mode to Custom or Standard, and then set the resolution and frame rate.


- Custom: Set the resolution manually.
- Standard: Select the desired resolution from the drop-down options.
- Step 3 After the settings are done, click Apply.

#### 6.2.3 Adjust Color

Set the infoframe override parameters of the external input source and adjust the color. The override parameter will be used in the calculation of color adjustment. If the value of this parameter is not set manually, the value that comes with the input source will be used.

Step 1 On the main menu screen, choose Input Settings > *input source* > Infoframe Override. The *input source* is HDMI1, HDMI2, DP, SDI1 or SDI2.

#### Figure 6-4 Infoframe override

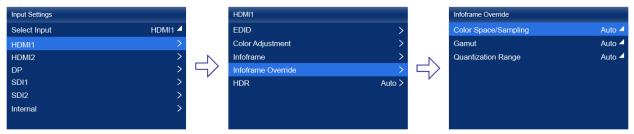

When the device working mode is All-In-One Controller, the Select Input menu is not displayed.

Step 2 Set the override parameters as required.

Select Auto and the device will read the attribute value that comes with the input source.

- Step 3 Press the **BACK** button to go back to the upper-level menu.
- Step 4 Select Color Adjustment.
- Step 5 Set the related parameters.

Parameter	Description
Black Level	It is used to adjust the brightness of the dark areas of the image. The smaller the value, the darker the dark part of the screen.
Contrast	It is used to adjust the brightness of the highlight areas of the image. The greater the value, the brighter the highlight part of the screen. Contrast and black level together affect the overall contrast of the image.
Saturation	It is used to adjust the color purity of the image. The greater the value, the more vivid
	the color.
Hue	It is used to adjust the color effect of the displayed image color.



Parameter	Description
Red Shadow/Green Shadow/Blue Shadow	It is used to adjust the brightness of the dark areas of the image. The principle is the same as that of black level, but only the RGB components are adjusted.
Red Highlight/Green Highlight/Blue Highlight	It is used to adjust the brightness of the highlight areas of the image. The principle is the same as that of contrast, but only the RGB components are adjusted.

#### 6.2.4 Set HDR Parameters (HDMI1 only)

Set the parameters used during the process of parsing HDR video sources.

Step 1 On the main menu screen, choose Input Settings > HDMI1 > HDR.

Figure 6-5 HDR							
Input Settings			HDMI1			HDR	
Select Input	HDMI1 🚄		EDID	>		HDR	Auto 🤺
HDMI1			Color Adjustment	>		HDR10 Parameters	>
HDMI2	>		Infoframe	>	N		
DP	>		Infoframe Override	>	$\leq$		
SDI1	>	,	HDR	Auto >	r		
SDI2	>						
Internal	>						

When the device working mode is All-In-One Controller, the **Select Input** menu is not displayed.

Step 2 Select HDR and select the HDR format from the listed options.

Select Auto and the device will read the attribute value that comes with the input source.

Step 3 Select **HDR10 Parameters** to complete the related settings. If the HDR format is SDR here, no parameters need to be set.

HDR-related parameters include:

- PQ mode: The mapping method of video source brightness.
  - ST2084 (PQ): This mode 1:1 maps the brightness of the video source. The part that exceeds the maximum screen brightness will still be adjusted to the maximum screen brightness.
  - ST2086 (Linear mapping): This mode linearly maps the brightness of the video source. It globally adjusts the video source brightness according to the maximum screen brightness to ensure that the ratio of the brightness of the entire source content remains unchanged.
- MaxCLL: Override the maximum video source brightness and adjust the brightness to a specified value. To restore the parameters to the defaults, select **Reset**.

#### 🖹 Note

Using the HDR function reduces the MX30 load capacity by less than half if the MX300 works with the A10s Pro receiving card. For details, see 11 Ethernet Port Load Capacity.

### 6.3 Set Internal Input Sources

Select the internal source stored in the device and set the related parameters for screen testing and troubleshooting.

Step 1 On the main menu screen, choose Input Settings > Internal.

#### Figure 6-6 Internal source

Input Settings			Internal Source	
Select Input	HDMI1 🗸		Image	<b>—</b> >
HDMI1	>		Resolution	>
HDMI2	>			
DP	>	$ \leq $		
SDI1	>			
SDI2	>			
Internal	>			

When the device working mode is All-In-One Controller, the Select Input menu is not displayed.

- Step 2 Select Image to navigate to the sub-menu and select a picture.
- Step 3 When the relevant parameters of the image are displayed, set the parameters according to your actual needs; otherwise, please skip this step.
- Step 4 Press the BACK button to go back to the upper-level menu and select Resolution.
- Step 5 Set Mode to Custom or Standard, and then set the resolution, frame rate and bit depth.

	parameters
Resolution	
Mode	Custom 🚄
Resolution	3840*2160
Frame Rate(Hz)	60.00 🚄
Bit Depth(bit)	8 🚄
Apply	/

Figure 6-7 Resolution parameters

- Custom: Set the resolution manually.
- Standard: Select the desired resolution from the drop-down options.

Step 6 After the settings are done, click Apply.

## 6.4 View Layer Parameters (All-In-One Controller Mode only)

The LCD screen of the controller is designed to only display layer parameters. To create or configure layers, please connect to VMP for these operations. For detailed instructions, please refer to VMP Vision Management Platform User Manual.

Step 1 On the main menu screen, select Layer Parameters.

#### Figure 6-8 Layer parameters

Layer Parameters	
Canvas Size (Max: 61.04Hz)	3840 * 2160
Layer 1	Off >
Layer 2	Off >
Layer 3	Off >

- Step 2 View the **Canvas Size** and the max frame rate.
- Step 3 Select a layer and view the related parameters.



- Input Source: The number of the layer that is using this input source is displayed in the input source information area.
- Scaling Mode: The scaling mode currently being applied.
  - Custom: Customized width and height.
  - Pixel to Pixel: Same as the width and height of the input source
  - Snap to Canvas: Same as the width and height of the canvas
  - Fill Screen: Same as the width and height of the screen
- Width: The layer width.
- Height: The layer height.
- H Position: The horizontal coordinate (X) of the layer on the canvas.
- V Position: The vertical coordinate (Y) of the layer on the canvas.
- Priority: The Z coordinate of the layer on the canvas. The greater the value, the higher priority.
- Crop: The status of the input crop, as well as the size and position of the crop.
- Border: The status of the layer border, as well as the border thickness and color.
- Step 4 If necessary, select other layers and view the related parameters

## 6.5 Set Output Parameters

#### 6.5.1 Adjust Screen Brightness

Adjust and save the screen brightness.

Step 1 On the main menu screen, select Screen Brightness and press the knob to let the brightness value become editable.

Figure 6-9 Screen brightness (the Send-Only Controller mode as example)



- Step 2 Rotate the knob to adjust the brightness to the target value, and then press the knob to confirm.
- Step 3 Choose Screen Configuration > Save to RV Card.

#### Figure 6-10 Save to RV card

Screen Configuration	
Mapping	
Swift Layout	>
Send Cabinet Config File	>
Save to RV Card	

Step 4 Select Yes in the displayed dialog box.

After the brightness value is successfully saved, a message appears on the menu screen.

#### 6.5.2 Adjust Gamma and Color Temperature

. . . . . . .

Adjust and save the Gamma and color temperature.

Step 1 On the main menu screen, choose Advanced Functions > LED Screen Color.

Figure 6-11 LED screen	color		
Advanced Functions	_	LED Screen Color	
Output Settings	>	Gamma	2.80 🚄
LED Screen Color	>	Color Temperature(K)	6500 🚄
		Reset	

- Step 2 Adjust the Gamma value.
  - 1. Select Gamma and press the knob to let the value become editable.
  - 2. Rotate the knob to adjust the Gamma to the target value, and then press the knob to confirm.
- Step 3 Adjust the color temperature value.
  - 1. Select **Color Temperature** and press the knob to let the value become editable.
  - 2. Rotate the knob to adjust the temperature to the target value, and then press the knob to confirm.
  - If you want to restore the parameters to the defaults, select  $\ensuremath{\textbf{Reset}}$  .
- Step 4 Press the BACK button to go back to the main menu, and then choose Screen Configuration > Save to RV Card.

#### Figure 6-12 Save to RV card

Screen Configuration	
Mapping	
Swift Layout	>
Send Cabinet Config File	>
Save to RV Card	÷

Step 5 Select Yes in the displayed dialog box.

Figure 6-13 Low latency

After the values are successfully saved, a message appears on the menu screen.

#### 6.5.3 Set Low Latency

The low latency function is used to reduce the delay at the controller, or increase the latency when the device works with high-latency equipment.

Step 1 On the main menu screen, choose Advanced Functions > Output Settings.

Advanced Functions		Output Settings	
Output Settings	>	Low Latency	
LED Screen Color	>	Additional Frame Latency	0
	Ċ,	Bit Depth(bit)	8 Auto 🗲



Step 2 Perform any of the following operations as required.


Enable low latency

- Set additional frame latency
  - a. Select Additional Frame Latency and press the knob to let the value become editable.

b. Rotate the knob to adjust the parameter to the target value, and then press the knob to confirm.

### 🖹 Note


- When low latency is enabled, the sync source cannot be set to Genlock.
- The latency at the controller is 0 frame (less than 1 ms) in Send-Only Controller working mode and 1 frame in All-In-One Controller working mode.
- To enable low latency, please make sure all Ethernet ports load the cabinets vertically and share the same Y coordinate. Free screen configuration (for example, Ethernet port 2 loads cabinets horizontally, or its Y coordinate is different from that of Ethernet port 1) will reduce the load capacity.

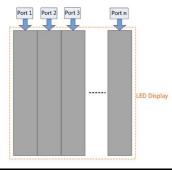

#### 6.5.4 Set Bit Depth

Set the output bit depth of the input source.

Step 1 On the main menu screen, choose Advanced Functions > Output Settings.

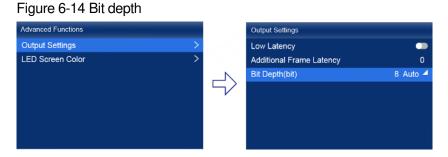

Step 2 Select **Bit Depth** and then select the desired bit depth value from the drop-down options.

If Auto is selected, the output bit depth is the same as the input bit depth.



# 7 Device Management

# 7.1 Switch Working Mode

Set the device working mode to All-In-One Controller or Send-Only Controller.

Step 1 On the main menu screen, choose System Settings > Working Mode.

#### Figure 7-1 Working mode

System Settings			Working Mode
Diagnostics	>		All-In-One Controller
Firmware Version	V1.4.0		Send-Only Controller
Return to Home	30s 🚄	N	
Temperature Scale	Celsius(°C) >	$\leq$	
Working Mode	All-In-One Controller >	, i	
Factory Reset	>		
About Us	>		

Step 2 Select All-In-One Controller or Send-Only Controller.

Step 3 Select **Yes** in the displayed dialog box.

## 7.2 Configure Communication Settings

#### Set an IP Address

Manually set a static IP address for the device or set up the device to automatically obtain an IP address.

Step 1 On the main menu screen, choose Communication Settings > Network Settings.



Communication Settings		Network Settings	
Network Settings	Manual >	Mode	Manual 🔺
SNMP		IP Address	192.168.0.10 🚄
Art-Net		Subnet Mask Default Gateway Appl	255.255.255.0 ≮ 192.168.0.1 ≮ y Reset

- Step 2 Choose Mode and then select a mode from the drop-down options.
  - Manual: Manually set a static IP address for the device.
  - Auto: The device automatically obtains an IP address.
- Step 3 If the manual mode is selected, set an **IP Address**, **Subnet Mask** and **Default Gateway** and select **Apply**. If the automatic mode is selected, this step is not required.

If you want to reset the IP address to the default, select Reset.

### Set the Protocol Switch

Set the SNMP and Art-Net protocol switch status.

#### Figure 7-3 Protocol

Communication Settings	
Network Settings	Manual >
SNMP	
Art-Net	

#### Note

For details, see the SNMP Protocol Instructions and Art-Net Protocol Instructions.

# 7.3 Enable Mapping

After the Mapping function is enabled, cabinets can display some information, such as the Ethernet port number and receiving card number, allowing users to easily obtain the locations and connection topology of receiving cards.

Step 1 On the main menu screen, choose Screen Configuration > Mapping.

#### Figure 7-4 Mapping

Screen Configuration	
Mapping	
Swift Layout	>
Send Cabinet Config File	>
Save to RV Card	:
	, and the second se

Step 2 Enable the Mapping function by toggling on this switch <.

# 7.4 Control Display Status

Set the display loaded by the controller to a black screen or frozen status.

Step 1 On the main menu screen, choose **Display Control**.

#### Figure 7-5 Display control

Display Control	
Normal	$\sim$
Black Out	
Freeze	

Step 2 Select a display status as required.

- Normal: Display the normal output screen.
- Freeze: Make the output screen always display the current frame. The input source is played normally.
  www.novastar.tech
  PAGE

Blackout: Make the output screen go black. The input source is played normally.

### 7.5 Diagnostics

#### 7.5.1 Upon Powering Up

When the device is powered on, it automatically conducts a diagnostic process:

- Normal startup: All functions of the MX30 are available for use.
- Abnormal Startup: Based on the error message displayed, select Export Log to obtain the diagnostic results. If there are only warning messages (in orange), you can choose Continue to proceed in a limited functionality mode. However, if there are error messages (in red), usage cannot be continued.

#### 7.5.2 Maintenance

Perform device diagnostics, then view and export the result.

Step 1 On the main menu screen, choose **System Settings** > **Diagnostics**.

Figure 7-6 Diagnostics		
System Settings		
Diagnostics		
Firmware Version	V1.4.0	
Return to Home	30s 🚄	
Temperature Scale	Celsius(°C) >	
Working Mode	All-In-One Controller >	
Factory Reset	>	
About Us	>	

Step 2 Select Yes in the displayed dialog box.

After the diagnostics operation is complete, the diagnostic result will be displayed.

Step 3 Select Close to close the dialog box and the screen as shown in Figure 7-7 is displayed.

#### Figure 7-7 After diagnostics

Diagnostics	
View Results	ок >
Export to USB Drive	:
×	

Step 4 Do any of the following as required.

• View the diagnostic results

Select View Results to enter the report page and view the results.

- Export the diagnostic result to a USB drive
  - a. Insert the USB drive to the USB port on the front panel of the device.
  - b. Select Export to USB Drive.

A prompt will be displayed after the operation is successful.



# 7.6 View the Firmware Version

View the current firmware program version of the device.

- Step 1 On the main menu screen, select System Settings.
- Step 2 View the current firmware program version next to **Firmware Version**.

#### Figure 7-8 Firmware version

System Settings	
Diagnostics	>
Firmware Version	V1.4.0
Return to Home	30s 🔺
Temperature Scale	Celsius(°C) >
Working Mode	All-In-One Controller >
Factory Reset	>
About Us	>

# 7.7 Reset to Factory Settings

Reset part or all of the device data to the factory settings.

 $Step \ 1 \quad On \ the \ main \ menu \ screen, \ choose \ System \ Settings > Factory \ Reset.$ 

Figure 7-9 Fact	ory reset		
System Settings			Factory Reset
Diagnostics	>		Keep User Data
Firmware Version	V1.4.0		Reset All
Return to Home	30s 🚄	N	
Temperature Scale	Celsius(°C) >	$\leq$	
Working Mode	All-In-One Controller >		
Factory Reset	>		
About Us	>		

- Step 2 Do any of the following according to the data you want to reset.
  - Reset part of the data

Reset all the data except the imported files, network parameters, language settings, and device name.

- a. Select Keep User Data.
- b. Select Yes in the displayed dialog box.

The device restarts automatically while the data is being reset.

Reset all the data (This action cannot be undone.)

#### Reset all the data to factory settings.

- a. Select Reset All.
- b. Select Yes in the displayed dialog box.

The device restarts automatically while the data is being reset.



# 8 Basic System Settings

# 8.1 Set Language

Change the system language of the device.

- Step 1 On the main menu screen, select 语言/Language.
- Step 2 Choose English or 中文 as required.


Figure 8-1 Language

语言/Language	
中文	$\sim$
English	

### 8.2 Set Session Timeout

Specify a certain amount of time for session timeout after which the LCD will return to the home screen from another screen automatically if no action is performed during the specified time.

Step 1 On the main menu screen, choose System Settings > Return to Home.

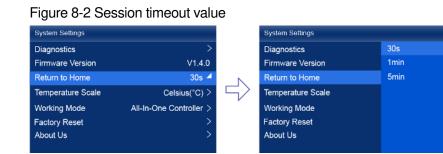

Step 2 Select 30s, 1min or 5min from the drop-down options as required.

## 8.3 Set Temperature Scale

Change the system temperature scale of the device.

- Step 1 On the main menu screen, choose **System Settings** > **Temperature Scale**.
- Step 2 Select Celsius(°C) or Fahrenheit(°F) as needed.

#### Figure 8-3 Temperature scale

System Settings	
Diagnostics	>
Firmware Version	V1.4.0
Return to Home	30s 🔺
Temperature Scale	Celsius(°C) >
Working Mode	All-In-One Controller >
Factory Reset	>
About Us	>

# 8.4 View Service Information

View the service information of NovaStar, allowing users to ask questions and give feedback.

Step 1 On the main menu screen, choose **System Settings** > **About Us**.

Figure 8-4 About us		
System Settings		
Diagnostics	>	
Firmware Version	V1.4.0	
Return to Home	30s 🚄	
Temperature Scale	Celsius(°C) >	
Working Mode	All-In-One Controller >	
Factory Reset	>	
About Us	>	

Step 2 View the official website, technical support email address and service hotline of NovaStar.

# **9** Product Specifications

Electrical Specifications	Power input	100-240V~, 50/60Hz, 2-0.8A		
	Max power consumption	55 W		
Operating Environment	Temperature	$-20^{\circ}$ C to $+50^{\circ}$ C		
	Humidity	0% RH to 80% RH, non-condensing		
Storage Environment	Temperature	$-30^{\circ}$ C to $+80^{\circ}$ C		
	Humidity	0% RH to 95% RH, non-condensing		
Physical Specifications	Dimensions	482.6 mm × 94.2 mm × 466.7 mm		
	Net weight	7.2 kg		
	Gross weight	10.2 kg		
		Note: It is the total weight of the product, accessories, and packing materials packed according to the packing specifications.		
Packing Information	Packing box	660.0 mm × 570.0 mm × 210.0 mm, kraft paper box		
	Accessory box	408.0 mm × 290.0 mm × 50.0 mm, white cardboard box		
	Accessories	1x Power cord		
		1x Ethernet cable		
		1x HDMI cable		
		1x DP cable		
		1x Certificate of Approval		
IP Rating	IP20			
	Please prevent the product from water intrusion and do not wet or wash the product			

The amount of power consumption may vary depending on various factors such as product settings, usage, and environment.

# **10** Video Source Specifications

Input	Resolu	tion	Color Space	Sampling	Bit Depth	Integer Frame Rate (Hz)
HDMI 2.0-1 4K	4K	4096×2160 (Forced)	RGB / YCbCr	4:4:4	10bit	24/25/30/48/50
					8bit	24/25/30/48/50/60
			YCbCr	4:2:2	8/10bit	
		3840×2160	RGB / YCbCr	4:4:4	10bit	24/25/30/48/50
			TCDCI		8bit	04/05/00/40/50/00
			YCbCr	4:2:2	8/10bit	- 24/25/30/48/50/60
	2K1K	2560×1440	RGB / YCbCr	4:4:4	10bit	24/25/30/48/50/60/75/100
			YODOr		8bit	
			YCbCr	4:2:2	8/10bit	- 24/25/30/48/50/60/75/100/120
		1920×1080	RGB / YCbCr	4:4:4	10bit	24/25/30/48/50/60/72/75/100/120/ 144
					8bit	24/25/30/48/50/60/72/75/100/120/ 144/240
			YCbCr	4:2:2	8/10bit	(240 Hz needs to be forced)
HDMI 1.4-1	4K	4096×2160 (Forced)	RGB / YCbCr	4:4:4	10bit	24/25
					8bit	24/25/30
			YCbCr	4:2:2	8/10bit	
		3840×2160	RGB / YCbCr	4:4:4	10bit	24/25/30
					8bit	
			YCbCr	4:2:2	8/10bit	
	2K1K 2	K 2560×1440	RGB / YCbCr	4:4:4	10bit	24/25/30/48/50/60
					8bit	04/05/00/40/50/00/75
			YCbCr	4:2:2	8/10bit	- 24/25/30/48/50/60/75
	1920×1080	RGB / YCbCr	4:4:4	10bit	24/25/30/48/50/60/72/75/100	
			YCDCr		8bit	
			YCbCr	4:2:2	8/10bit	- 24/25/30/48/50/60/72/75/100/120
DP 1.1	4K	4096×2160 (Forced)	RGB / YCbCr	4:4:4	10bit	24/25/30
					8bit	
			YCbCr	4:2:2	8/10bit	



Input	Resolution		Color Space	Sampling	Bit Depth	Integer Frame Rate (Hz)	
		3840×2160	RGB / YCbCr	4:4:4	10bit	24/25/30	
			10001		8bit		
			YCbCr	4:2:2	8/10bit		
	2K1K	2560×1440	RGB / YCbCr	4:4:4	10bit	24/25/30/48/50/60	
			TODOI		8bit	04/0E/00/49/E0/C0/7E	
			YCbCr	4:2:2	8/10bit	24/25/30/48/50/60/75	
		1920×1080 RGB / YCbCr				10bit	24/25/30/48/50/60/72/75/100/120
			TODOI		8bit	24/25/30/48/50/60/72/75/100/120/	
			YCbCr	4:2:2	8/10bit	144	
3G-SDI	2K1K	2048×1080	YCbCr	4:2:2	10bit	24/25/30/48/50/60	
		1920×1080					

### Note

The table above only displays a selection of common resolutions and integer frame rates. Decimal frame rates are also supported, allowing for automatic frame rate adaptation from the highest frame rate of each resolution down to 23.98/29.97/47.95/59.94/71.93/119.88/143.86 Hz.

# **11** Ethernet Port Load Capacity

### When Working with A10s Pro Receiving Card

The formula of calculating the load capacity per Ethernet port and the detailed parameters are as follows.

- 8bit: Load capacity × 24 × Frame rate < 1000 × 1000 × 1000 × 0.95
- 10bit: Load capacity × 32 × Frame rate < 1000 × 1000 × 1000 × 0.95

Max Load Capacity per Ethernet Port (Pixels)				
Frame Rate / Bit Depth	8bit	10bit		
24 Hz	1,649,305.556	1,236,979		
25 Hz	1,583,333	1,187,500		
30 Hz	1,319,444	989,583		
50 Hz	791,667	593,750		
60 Hz	659,722	494,792		
120 Hz	329,861	247,396		
144 Hz	274,884	206,163		
240 Hz	164,931	123,698		

### When Working with Other Armor Series Receiving Cards

The formula of calculating the load capacity per Ethernet port and the detailed parameters are as follows.

- 8bit: Load capacity × 24 × Frame rate < 1000 × 1000 × 1000 × 0.95
- 10bit: Load capacity × 48 × Frame rate < 1000 × 1000 × 1000 × 0.95

Max Load Capacity per Ethernet Port (Pixels)				
Frame Rate / Bit Depth	8bit	10bit		
24 Hz	1,649,305.556	824,653		
25 Hz	1,583,333	791,667		
30 Hz	1,319,444	659,722		
50 Hz	791,667	395,833		
60 Hz	659,722	329,861		
120 Hz	329,861	164,931		
144 Hz	274,884	137,442		
240 Hz	164,931	82,465		



# Note

The maximum load capacity is only achieved when the load width of a single port is 192 pixels or more. If the load width is less than that, the load capacity will be reduced accordingly, calculated as (192 - load width) × load height.



#### Copyright © 2024 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

#### Trademark

NOVASTAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

#### Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website www.novastar.tech

Technical support support@novastar.tech